



QUICK START GUIDE

COCKPIT WEBUI

Contents

<u>First Login and Password Change</u>	<u>2</u>
<u>Changing the Network Configuration</u>	<u>3</u>

First Login and Password Change


To begin, open a web browser and navigate to the Cockpit interface of your server using its IP address.

Example:

```
https://192.168.1.100
```

Log in using the default administrator credentials:

Username	ovs
Password	1234

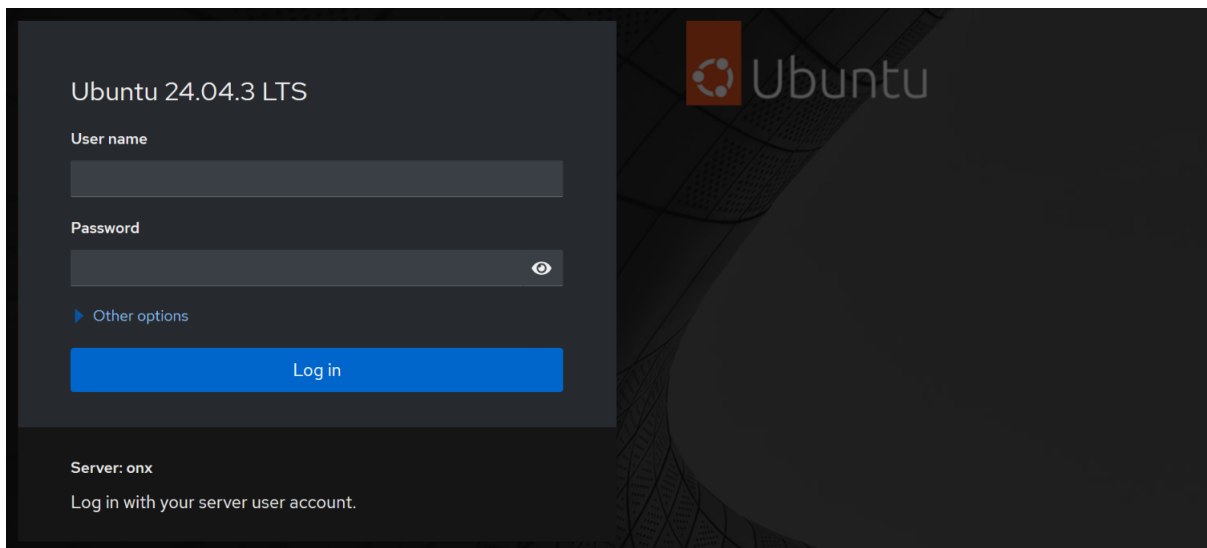

You will be prompted to re-enter the default password, after which you must set and confirm a new password.

Once completed, you will be redirected to the server dashboard.



Always use strong and unique passwords to ensure system security.

Changing the Network Configuration



By default, interfaces are set to use **DHCP** for obtaining an IPv4 address.

Open the **Networking** menu and select the interface you want to configure.

Next to **IPv4**, click the configuration option to modify settings.

In the **IPv4 Configuration Overview**, you can:

- Change the method from **DHCP** to **Manual** to assign one or more static IP addresses.
- Modify **DNS** and **routing** settings as needed.

Click **Apply** once you have entered the correct configuration.

A warning will appear, notifying you that the server connection will be lost.

- If the configuration is correct, confirm by clicking **Change the settings**.

The system will now be reachable at the newly assigned IP address.